

HYDROLIFE

Free-standing Bottle-type Hot & Cold Water Dispenser

This unit provides enough steaming hot and chilled water to serve up to ten people. (3 litres of cold and 5 litres of hot per hour). This dispenser has a +-20 litre water bottle fitted on top and will need to be filled when empty. This can be done by connecting a purifier to the nearest tap, and filling the bottles from there, or by making use of our water delivery system.

Features:

- Bottle-type – Uses standard 5 gal. (18.9 litre) water dispenser bottle or purifier and mineraliser bottle
- Dispenses Hot and Cold water
- Adjustable cold water thermostat
- Removable drip-tray
- Modern silver finish
- Warranty period: 1 year


Benefits:

- No installation required
- Can be used anywhere there is a standard plug
- Still dispenses water (not heated/cooled) during loadshedding

Specifications:


- Compressor cooling
- Adjustable thermostat for cold water
- Cooling Capacity: 2.8 lt/hr at 4 - 12°C (20 cups)
- Stainless steel cold tank (SS304): 3.0 litres
- Cooling power consumption: 90 W
- Heating Capacity: 5 lt/hr at 85 - 95°C (30 cups)
- Heating power consumption: 500 W
- Height: 99 cm
- Depth: 36 cm
- Width: 36 cm
- Boxed Weight: 14 kg



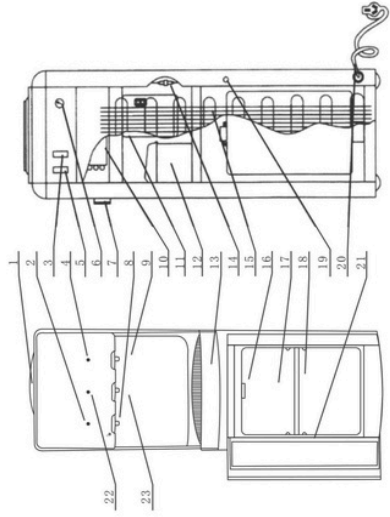

Operation

1. Turn round the hot water switch (red) at the place of "on" and the red light flashes. If you don't want to use hot water, turn the switch at "off" and the water coming out is normally warm.
2. Turn the cold water switch (blue) round at the place of "on" and the green light flashes.
3. When the red light turns off automatically, the hot water has got to 90-95°C to be fit for drinking. When the hot water temperature is below 80°C, the red light flashes and the water is going to be heated up automatically.
4. When the green light turns off automatically, the cool water (refrigerator) temperature is about 6°C to be fit for drinking.
5. After the empty refrigerator is operated for about 2 hours to enter normal order on and off, you can put the food which you want to store into the refrigerator (if the food temperature is above the room temperature, the food should be cooled down to the room temperature before its entering.) there must be some intervals between the refrigerator and the store-room to let cold air get through. The watered sponge at the bottom of the refrigerator must be taken out at a regular time, then set it back after its drying.
6. The operating methods for the drinker with a disinfection cupboard are as the following: turn round the timer to the time needed for disinfection (0-15 minutes) and the ozonizer starts to work till the set stopping time to finish the disinfection. Generally speaking, it can take the aim of disinfection to disinfect the cupboard 1-2 times every day.

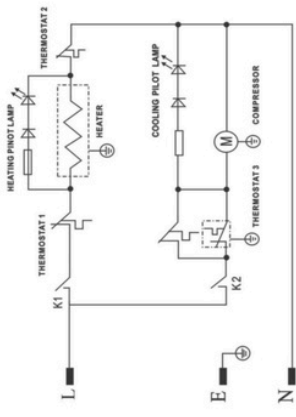

- Notes:
1. Circuit with ozonizer used for type with disinfecting box.
 2. Green lamp of all types of disinfecting box single heating is director.
 3. Circuit of the refrigerates only used for the refrigerating series dispenser.
 4. Circuit of motor-compressor is only used for motor-compressor refrigerating dispenser.

Caution


1. The ground wire be connected well.
2. Keep children away from the machine to avoid hurting them during your usage.
3. If the drinker is not yet watered up and the power is switched wrong, the machine may be over-heated then. The protection switch will cut off the power automatically to protect the heating series. Just waiting for 15 minutes, the user can operate the machine normally again according to the correct installing method.
4. Press the water dispenser on level ground. Keep it 15 cm away from the wall to let air through.
5. Don't keep combustibles near the water dispenser, please.
6. Don't turn the tap at will to avoid making a leaking or a water-cut.
7. Cut off the power at a long time of no using. Drain the left water in the machine. Open the cupboard door of the refrigerator. Clean the drinker inside and outside, close the door again after about 2 days and cover the machine with a dust cover.
8. Pull out the power socket before repairing or maintaining.
9. If there are dust and dirt on the condenser surface, use a piece of watered soft cloth to clean it up.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. This instrument will be rejective to use for the people with disfigurement (including children) for body, sensory organ or intellect. Only they get enough foster care from their minder and be taught to how to use this instrument guide.

Simple breakdown fixing

Breakdown	Reason	Fixing method
None-cooling None-heating	The power is cut off. The blue switch keeps closed Air temp. And the water temp. are below the controlling temp.	Check the power. Change the fuse.
None-cooling	The red switch keeps closed.	They don't belong to break-downs.
None-heating	The heating tube burns down. The water tap releases.	May be dry-burning, start the machine. Change the heating tube. Change the heating tube.
Water leakage	The water tap rubs down. The sealed ring is aged.	Twain the tap with a belt. Change the sea led ring.
The upper lid overflows	The lid on the pure water bottle is broken.	Change a good bottle and drain the left water in the machine off.

- Warning!**
Avoid the danger from instrument unsteadiness, please install and fix according the operated book.
1. Water dispenser.
 2. Wall-fix screw.
 3. Fix supporter.
 4. Water dispenser screw.

Warning! Please Do not destroy the cooling loop.

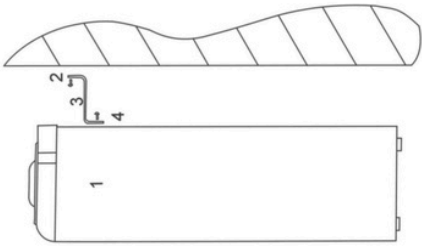

Technical data

Name Item	Compressor cooling		Electronic cooling		Single Hot Water Dispenser
	Single Cool Water Dispenser	Cold/Hot Water Dispenser	Single Cool Water Dispenser	Cold/Hot Water Dispenser	
Cooling Power	90W	90W	65W	65W	—
Cooling Capacity	2L/H ≤10°C	2L/H ≤10°C	0.75L/H ≤15°C	0.75L/H ≤15°C	—
Heating Power	—	550W	—	550W	550W
Heating Capacity	—	5L/H ≥90°C	—	≥5L/H ≥90°C	≥5L/H ≥90°C
Refrigerant code	R134a/R29				
Power	220-240V~50-60Hz				
Disinfection Cupboard Power	3 W				
Atmo humidity	T				



Multi-function series (with fresh food preservation cabinet and store cabinet)

Water-dispenser

Operating Instructions

★ Family-expense electrical equipment must use tri-hole socket and leakage of electricity protecting device with ground wire.

1. Upper Lid-smart In The Middle Part
 2. Hot Water Power Display
 3. Hot Water Power Switch
 4. Cold Water (refrigerator, disinfection) power Display
 5. Cold Water (refrigerator, Disinfection) power Switch
 6. Cooling Temp. Controller
 7. Disinfection Timer
 8. Cold Water Tap
 9. Hot Water Tap
 10. Cold Water Tank
 11. Hot Water Tank
 12. Compressor
 13. Waste Water tank
 14. Fuses
 15. Condenser
 16. Ozonator
 17. Fridge (disinfection Cabinet storage cupboard)
 18. Access board
 19. Water Drain Cap
 20. Power Wire
 21. Cupboard Door
 22. Normal Water Power Display
 23. Normal Water Tap
- Items 7 And 16 Are Not Fit The Cold Cupboard (storage Cupboard).
Items 3 And 16 Are Not Fit Single Cool Water Drinker.
In A Single Cool Water Disinfected Drinker, Item 2 Means Power Display For The Disinfected Cupboard.
Item 2 Means Heat Preservation Display For Cool Water In A Single Cool Water Drinker.

Installation

1. Tear off the hygienic tag on the lid of a pure water bottle and tap it on the smart of the drinker promptly.
2. Press the water tap to let off the air in the tank until water is out, knock the tap for several times in order to prevent the water Channel from being clogged with air bubbles.
3. When the drinker is used at the first time or after a long time stopping, wash the tank inside for 2 times with pure water.
4. It is only after finishing the above processes that you can connect the power.